

# ***INSTALLATION AND SERVICE MANUAL***

microprocessor-controlled system controller for solar-thermal systems:

## **SOLAREG II**

### **BASIC/ENERGY**





***IMPORTANT!***

***PLEASE, READ CAREFULLY THIS MANUAL BEFORE INSTALLATION AND USE OF THE  
APPLIANCE!***

***NON-COMPLIANCE CAN RESULT IN GUARANTEE EXCLUSION!***




***KEEP THE MANUAL SAFE!***

The described appliance has been made and tested in compliance with CE-guidelines.

<b>1</b>	<b>Symbols and short descriptions</b>	<b>3</b>
<b>2</b>	<b>Range of application / characteristic features</b>	<b>4</b>
2.1	Range of application	4
2.2	Appliance characteristic features	4
2.3	System scheme for SOLAREG II BASIC / ENERGY	5
<b>3</b>	<b>Safety instructions</b>	<b>6</b>
<b>4</b>	<b>Appliance installation</b>	<b>7</b>
4.1	Opening of the appliance	7
4.2	Wall installation	8
<b>5</b>	<b>Electrical connection - overview</b>	<b>9</b>
<b>5.1</b>	<b>230V-connections</b>	<b>10</b>
5.1.1	Overview: 230V-connections for SOLAREG II	10
<b>5.2</b>	<b>Connection temperature sensor</b>	<b>11</b>
5.2.1	Overview: sensor connections for SOLAREG II	11
5.2.2	Overvoltage protector module	11
<b>6</b>	<b>Operation / Display</b>	<b>12</b>
6.1	Overview of display and operating elements	12
6.2	Display – maximal display	13
6.3	Explanation of graphic symbols	13
6.4	Button function	15
6.5	Exemplary appliance operation	16
<b>7</b>	<b>Operating menu</b>	<b>17</b>
7.1	Overview: Construction of menu structure	18
7.2	Menu „Info“ 	19
7.3	Menu „Programming“ 	20
7.4	Menu „Manual operation“ 	20
7.5	Menu „Basic adjustment“ 	21
<b>8</b>	<b>Controller functions</b>	<b>21</b>
<b>8.1</b>	<b>General controller functions</b>	<b>22</b>
8.1.1	Storage tank charge	22
8.1.2	Rotational speed regulation	23
8.1.3	Thermostat function (reheating)	23
8.1.4	Cooling function	24
8.1.5	Tube collector function	24
<b>8.2</b>	<b>System monitoring</b>	<b>24</b>
8.2.1	Sensor monitoring	24
8.2.2	Flow monitoring	25
8.2.3	Collector protection function / recooling	25
8.2.4	System protection function	25
<b>8.3</b>	<b>Additional functions</b>	<b>26</b>
8.3.1	Energy productivity measurement	26
<b>9</b>	<b>Failure repair</b>	<b>26</b>
9.1	Failures with error message	26
9.2	Failures without error message	27
<b>10</b>	<b>Technical data SOLAREG II</b>	<b>28</b>
<b>11</b>	<b>Resistance table PT1000</b>	<b>28</b>
<b>12</b>	<b>Table typical - current adjustments</b>	<b>29</b>
<b>13</b>	<b>Terms of guarantee</b>	<b>30</b>
<b>14</b>	<b>Declaration of conformity</b>	<b>30</b>

# 1 SYMBOLS AND SHORT DESCRIPTIONS

Explanation of graphic symbols used in the service manual:

	Attention! Symbol points out possible dangers and mistakes
	Attention 230V-voltage! Symbol points out the dangers through highly dangerous voltages.
•	Enumeration
	Please, pay attention!
<b>i</b>	Information for operation / characteristic features
⇒	Realisation / procedure
?	Testing / checking

## Often used abbreviations

In the following descriptions and in the controller display abbreviations or short symbols are partly used for simplification rea-

sons. Their meaning is presented in the following table.

Abbr.	Meaning	Abbr.	Meaning
Tcoll	Temperature collector [°C]	min	Minimal value
Tst	Temperature storage tank [°C]	max	Maximal value
Tret	Collector return temperature [°C]	>	bigger than
Tth	Temperature for thermostat [°C]	K	Kelvin Grade, corresponds to 1 grade temperature difference
xxx	Any display value	°C	Celsius Grade
h	Operating hours	dT	Temperature difference
		kWh	Energy productivity in kWh

**Tip:** Put the enclosed with the appliance „**Quick-Info**“ into the pocket provided on the back of the appliance to have always at hand an overview of all most important functions.

## 2 RANGE OF APPLICATION / CHARACTERISTIC FEATURES

### **2.1 Range of application**

The solar thermal controllers SOLAREG II BASIC/ENERGY are powerful microprocessor-controlled control appliances for function-control of solar thermal systems.

The controllers are suitable for most saleable types of solar thermal systems.

SOLAREG II – BASIC for systems with one collector and one storage tank.

SOLAREG II – ENERGY for systems with one collector and one storage tank with energy productivity measurement.

Controllers are planned for use in dry spaces, in residential, business and industrial areas.

Wrong use has to be checked before starting by means of valid regulations.

### **2.2 Appliance characteristic features**

The series SOLAREG II is provided with the following outfit features:

- **Intuitive, menu-conducted operation** with graphic symbols and four operating keys.
- Temperature differential regulation **digitally adjustable regulation values**
- **Rotational speed control or switch control** of solar circulation pump.
- Special function for systems with **tube collectors**
- Integrated **operating hour meter** for storage tank charging
- Extensive functions for **system monitoring** with error and failure display through symbols
- Integrated **energy productivity measurement** which by means of the productivity measuring set (accessories) measures the energy obtained by a solar system. (SOLAREG II – ENERGY)
- Storing of all adjusted values even in the case of any longer mains voltage breakdown.
- Large wiring space


#### **Available accessories:**

- Temperature sensor PT1000
- Flow transmitter for productivity measurement

## 2.3 System scheme for SOLAREG II BASIC / ENERGY

Employment in similar systems of equal function is possible.

Tip: The following system plan is not a complete hydraulic wiring diagram.

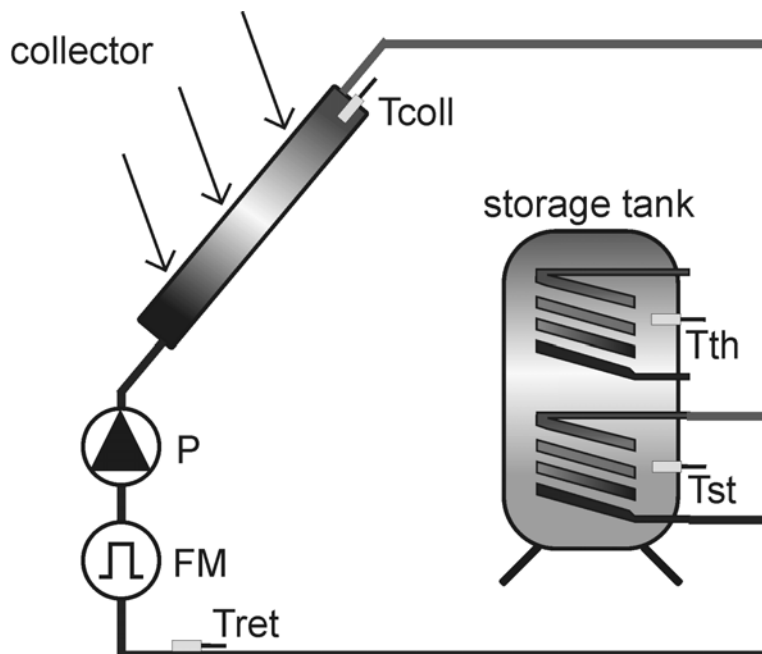

Tcoll	Temperature measuring point collector
Tth	Temperature measuring point thermostat
Tret	Temperature measuring point collector return
Tst	Temperature measuring point storage tank
P	Pump
FM	Flowmeter

Tth, FM and Tret are only used only for SOLAREG II - ENERGY

### 3 SAFETY INSTRUCTIONS



**All installation and wiring work at the controller must be carried out only in an idle condition.**

**The connection and starting of SOLAREG II must be carried out only by a competent staff. While doing this you have to keep to valid safety regulations, above all VDE 0100.**



Disconnect the appliance from operating voltage completely before any installation or wiring work at the electrical operating material.

Never mix-up the connections of protective low voltage area (sensor, flow transmitter) with 230V-connections. Destruction and extremely dangerous voltage on the appliance and on the connected sensors and other appliances is possible.



Solar systems can absorb high temperatures. There is a danger of burning! Be careful during installation of the temperature sensor!



Mount SOLAREG II so that not to cause inadmissible operating temperatures ( $>50^{\circ}\text{C}$ ) for the appliance e.g. through sources of heat.



SOLAREG II is neither splash-proof nor drip-proof. And so mount it in a dry place.



For safety's sake the system can remain in a hand mode only for test purposes. In this operating mode neither maximal temperatures nor sensor functions are monitored.



If any damage on the controller, the cable or connected pumps and valves have been detected, the system must not be started.



Check if the materials used for tubing, insulation as well as the pumps and valves are suitable for existing temperatures in the system.

## 4 APPLIANCE INSTALLATION



**The controller must be installed only in dry, no explosion-dangered places. Installation on the combustible ground is not permissible.**

### **4.1 Opening of the appliance**

You do not need any tools to open the appliance. Upper part of the appliance housing is bolted by means of two rasters with a lower part. It can be unlocked and opened

upwards through light pulling at the side parts (straps) of the upper part of the appliance housing (see picture).




Keep opening the housing upper part so far upwards until it is latched. Now you can

freely install and wire the controller.




**Before starting shut the cover, please, until it is latched !**

## 4.2 Wall installation

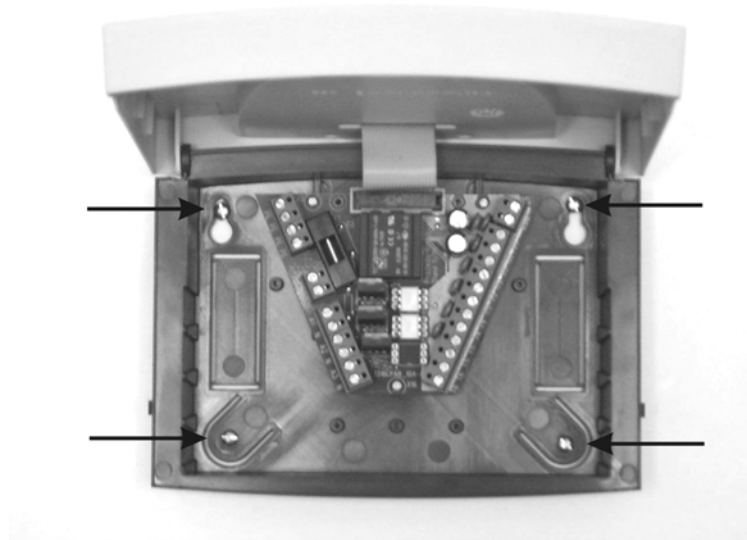

In the case of the wall installation proceed in the following way:

- Drill installation holes accordingly to the enclosed drilling jig
- Screw in two upper screws up to 6 mm distance
- Open the appliance as it is described and hang it onto two screws. Now two lower screws can be mounted.
- **Tighten all screws so firmly only as it is really necessary in order to avoid damages in the housing lower part!**

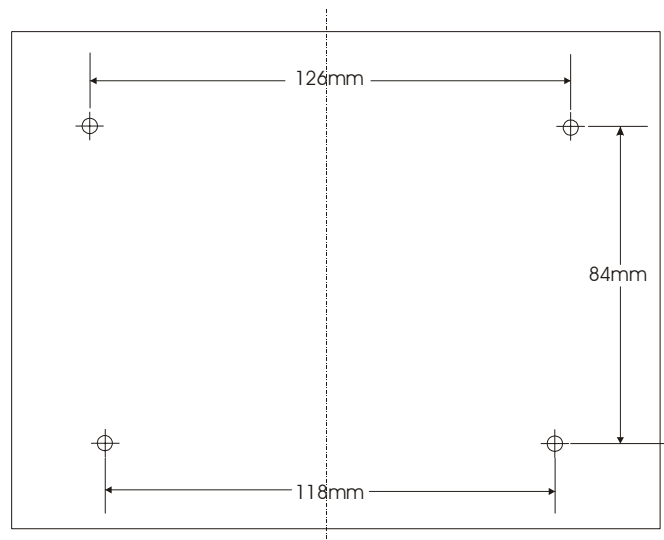



## 5 ELECTRICAL CONNECTION - OVERVIEW




Please, absolutely follow safety instructions  
in chapter 2

**The appliance may be opened only when mains voltage has  
been safely cut off and it is protected against restarting**



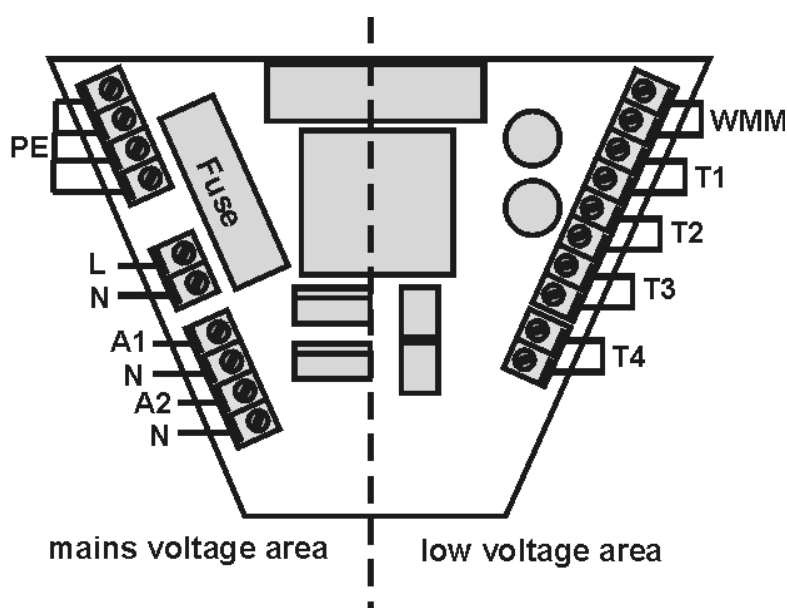

The connection of all electrical wires takes place on the componentry in the housing lower part. On the right componentry side there are (low voltage) connections for sen-

sors and flow transmitters. On the left side there are 230V-connections. The following picture shows the connection field of SOLAREG II BASIC/ENERGY.










PE	Earthed wire	WMM	Flow transmitter
L	Phase of mains	T1	Temp.- sensor collector 1
N	Zero wire of mains	T2	Temp.- sensor storage tank 1
A1	Phase switch output 1	T3	Temp.- sensor collector 2 / storage tank 2
N	Zero wire switch output 1	T4	Temp.- sensor collector- return
A2	Phase switch output 2		
N	Zero wire switch output 2		

**General connection rules:**

-  In the case of all connecting wires skin a cable covering ca. 6 - 8 cm long and the ends of veins ca. 10 mm long.
-  In the case of flexible wires you must have outside or inside the appliance a pull-relief. The vein ends must be equipped with wire end ferrules. In the bushing nipples on the 230V-side you can mount PG9 screwed connections if necessary.
-  Cables are inserted in the appliance through provided holes...
-  All earthed wires must be fixed in binders marked with „PE“ (potential earth).

**5.1 230V-connections**

For 230V-connections you must follow the following points:

-  In the case of solid electric mains the mains voltage for the controller outside the controller must be able to be switched off by a switch.  
In the case of electric mains with the help of cables and shock-proof plug this switch may be left out.
-  Controllers are intended for the operation in 230V /50Hz mains. The pumps to be connected and valves must be laid for this voltage!
-  All earthed wires must be connected to binders marked with PE.
-  Zero wire binders (N) are electrically connected and are not switched!
-  All switch outputs (A1/A2) are 230V~ closers. If potential-free contacts are needed, appropriate accessories are available
-  Output A1 is operated, according to an adjustment, as a closer (rotational speed = 100%) or in the case of the function „Rotational speed regulation“(rotational speed < 100%) with block-modulated output signal.
-  Output A2 (ENERGY only) is planned for thermostat function or cooling function. This output is required only if the corresponding, additional functions are activated.

**5.1.1 Overview: 230V-connections for SOLAREG II**

In the following table an assignment of switch outputs for various controller types is presented. Grey fields are absolutely nec-

essary for basic function of the system. White fields are intended for optional additional functions.

Controller		Switch outputs		
Type	Description	A1	A2	
BASIC	1 collector – 1 storage tank (P)	P	-	
ENERGY	1 collector – 1 storage tank (P)	P	Cooling/thermostat	

## 5.2 Connection temperature sensor

The appliances SOLAREG II work with precise platinum-temperature sensors type PT1000. According to the controller type and function range you need from 2 to 4 sensors.

### Installation / cabling of temperature sensors:

- ➡ Mount the sensors in the provided places in the collector and storage tank. Pay attention to a good temperature crossing and use, if necessary, heat conducting paste.
- ➡ The wires of the temperature sensor can be lengthened. Up to 15 m long you need a 2 x 0,5mm<sup>2</sup> cross-section, up to 50 m 2 x 0,75 mm<sup>2</sup>. In the case of long connec-

tions (collector) shielded extension lead must be used. On the sensor side do not pinch the shield but cut off and isolate it!

- ➡ Temperature sensors are connected according to the layout plan. Polarity of both veins may be ignored in the case of temperature sensors.

☞ Sensor wires must be laid separately from 230V-wires.

### 5.2.1 Overview: sensor connections for SOLAREG II

In the following table the assignment of sensor inputs is presented. Grey fields are absolutely necessary for basic function of

the system. White fields are intended for optional additional functions.

Controller		Inscription on controller			
Type	Description	T1	T2	T3	T4
BASIC	1 collector - 1 storage tank (P)	Tcoll	Tst	-	-
ENERGY	1 collector - 1 storage tank (P)	Tcoll	Tst	Tth	Tret



**Before starting shut the cover until it is latched !**

### 5.2.2 Overvoltage protector module



SOLAREG II is equipped with an overvoltage fine protector on all sensor inputs. Additional protection measures are not necessary as a rule for internal sensors. For collector sensor an additional protection (PROZEDA sensor connecting box with overvoltage protection) is recommended. External protection elements must not contain any additional capacitors because they may distort measurement result.

## 6 OPERATION / DISPLAY

### 6.1 Overview of display and operating elements




Number	Description
1	Display with graphic symbols
2	Control button scroll upwards / +
3	Control button exit / break-off
4	Control button scroll downwards / -
5	Control button choice / confirmation

## 6.2 Display – maximal display

In the following graphics there are all symbols which may appear during work on display, simultaneously presented. During a

real work, according to menu position, only some of these symbols appear.

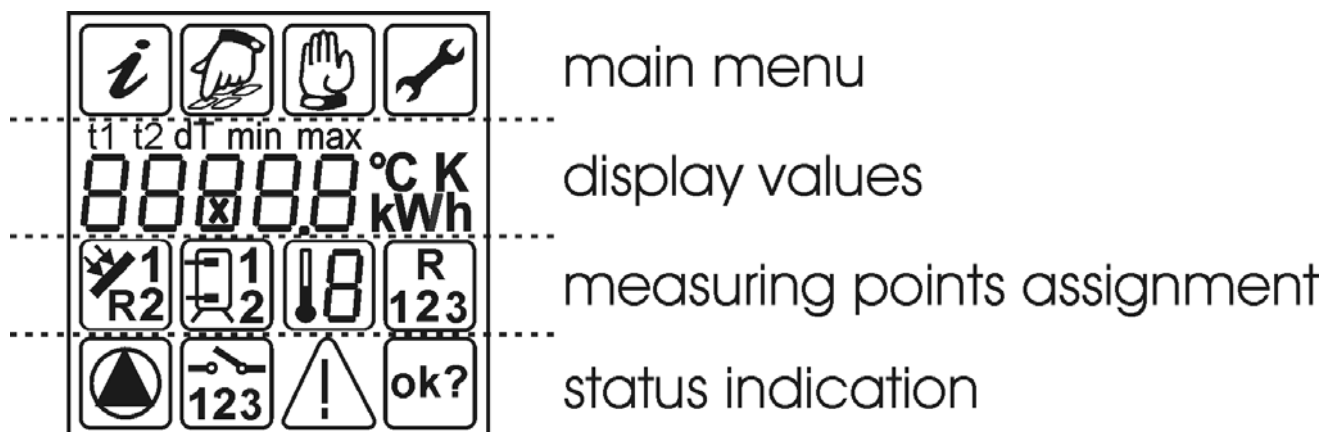














## 6.3 Explanation of graphic symbols

In the following table the meaning of each symbol is described.

Graphic symbol	Description	Indication in operation
<b>Main menu</b>		
	Menu „Info“	Symbol flashes, if possible to be chosen
	Menu „Programming“	
	Menu „Manual operation“	
	Menu „Basic adjustment“	

During selection the active symbol flashes. If the menu is chosen by means of the button, a corresponding symbol is statically presented. All others fade out.

Graphic symbol	Description	Indication in operation
<b>Indication values</b>		
<b>dT</b>	Temperature difference	
<b>min</b>	Min value	appears when minimal values are indicated
<b>max</b>	Max value	appears when maximal values are indicated
	5 x 7 segment display Presentation of figures 00000 to 99999	Issue of all figure values, display flashes when a value is changed
<b>°C</b>	Temperature in Celsius	
<b>K</b>	Temperature difference in Kelvin	
<b>h</b>	Operating hours	
<b>kWh</b>	Productivity indication in kWh	
<b>Measuring points assignment</b>		
	Temperature measuring point collector	
	Temperature measuring point storage tank below	
	Temperature measuring point collector-return	
	Temperature measuring point storage tank above (thermostat function)	
	Antifreezing sensor or universal temperature measuring point (T3) (no sensor monitoring)	
<b>Status indication</b>		
	Solar circulation pump	symbol goes round when solar circulation pump is on
	Switch output 1 is active	appears when switch output 1 active (on)
	Switch output 2 is active	appears when switch output 2 active (on)
	Reference to system fault	display flashes when a fault occurs in the system
	Safety query for value changes which are stored	Input value can be rejected  or accepted 





## 6.4 Button function

Operation of the controller SOLAREG II takes place comfortably and simply by means of 4 operating buttons. By means of operating buttons you can:

- recall display values
- carry out appliance adjustment

Graphic symbols of the display lead you in a simple way through the operating structure and show clearly the current menu points, display values or parameters.

Operating buttons have the following functions:

Button	Function	Description
	„Up“ „+“	<ul style="list-style-type: none"> <li>• Menu points upwards</li> <li>• Value change: increase of the indicated value by 1 at longer pressing the values raise constantly</li> </ul>
	„Call“ „Down“ „-“	<ul style="list-style-type: none"> <li>• Call up of main menu, menu points downwards</li> <li>• Value change: decrease of the indicated value by 1 at longer pressing the values decrease constantly</li> </ul>
	„Scroll left“ „Exit“  „Break-off“	<ul style="list-style-type: none"> <li>• In main menu scroll to the left</li> <li>• Exit menu</li> <li>• Exit menu point</li> <li>• Break-off value change without storing</li> </ul>
	„Scroll right“ „Choice“ „Confirmation“	<ul style="list-style-type: none"> <li>• In main menu scroll to the right</li> <li>• Choosing one menu point</li> <li>• Confirmation of value change with storing</li> </ul>

## 6.5 Exemplary appliance operation

When you have read the descriptions of the menu in chapter „Operating menu“, you can practise operating steps. Below an operation example is presented. The current col-

lector temperature is the starting position in menu „Info“. Target: change of the parameter „Storage tank dToff“ from 3K to 4K in menu „Programming“



White: Symbol static



Grey: Symbol flashes

Button	Function	Graphic indication after operation step				Description
	„Exit“					Exit menu's „Info“
	„Scroll right“					Choosing menu „Programming“
	„Call“		max 65°C		1	Call up menu „Programming“, the first menu point appears
	„Down“		dT min 3 K		1	Repeated pressing up to menu point „S1 dTmin„ appears.
	„Choice“		dT min 3 K		1	Choosing presented parameter
	„Up“		dT min 4 K		1	Increase of the parameter value from 3K to 4K
	„Con-firm“		dT min 4 K		1	Confirmation of the parameter
	„Con-firm“		dT min 4 K		1	Storing of the parameter
	„Exit“					Exit menu „Programming“
	„Scroll left“					Choosing menu „Info“
	„Call“		60°C		1	Call up menu „Info“







## 7 OPERATING MENU

To make the operation of the appliance clear, the appliance, operating and display functions are divided into 4 groups (= main menus).

Four menus





- Info
- Programming

- Manual operation
  - Basic adjustment
- give you the information about your solar system.  
Each active menu is presented in the upper line of the display through corresponding graphic symbol.

Menu	Overview of contained functions
Info 	Main menu for automatic regulation of solar system. <ul style="list-style-type: none"> <li>• Indication of current measuring values</li> <li>• Indication of system condition</li> <li>• Indication of error messages</li> <li>• Indication of operating hours and energy productivity (if available)</li> </ul>
Programming 	Change and adjustment of programmable desired values (parameters)  <b>Hint:</b> changes can affect system functions
Manual operation 	Switching on and off connected pumps / valves by hand
Basic adjustment 	Information about basic adjustment for system function.  <b>Please, pay attention:</b> adjustments and changes must be carried out only by a specialist!

## 7.1 Overview: Construction of menu structure

The overview shows the whole menu structure. According to basic adjustment and system type some menu points may be left.



			
Info	Programming	Manual operation	Basic adjustment
Current collector temperature	Maximal temperature storage tank	pump1 on / off	Collector protect. function on / off
Minimal collector temperature	storage tank dTmax (dTon)	Heating/cooling on / off	Collector protection temperature
Maximal collector temperature	storage tank dTmin (dToff)		Recooling function
Current temperature Storage tank below	Thermostat function Ton		Recooling temperature
Minimal temperature Storage tank below	Thermostat function dT		Tube collector function
Maximal temperature Storage tank below			Energy productivity measure on/off
Universal measuring point T3 alternately current storage tank temperature			Additional functions: on / off
Current collector return temperature			
Operating hours			
Energy productivity			
Grey fields: reading for SOLAREG II ENERGY only			


## 7.2 Menu „Info“

In this operational mode all measuring values and operating states are shown.













**i Only controller-specific values, as well as those needed for activated additional functions are shown!**

If the values are marked as „resetable“, they may be reseted in the following way:

➔ Choice of the value by means of buttons  and 

➔ Resetting of the value by means of the button 









➔ Message „OK?“ confirm with  = no or  = yes

Indication e.g.		Meaning	Reset possi- ble
75 °C		Indication of current collector temperature	no
min 12 °C		Indication of minimal collector temperature Resetable to current temperature	yes
max 105 °C		Indication of maximal collector temperature Resetable to current temperature	yes
52 °C		Indication of current temperature storage tank	no
min 40 °C		Indication of minimal temperature storage tank Resetable to current temperature	yes
max 67 °C		Indication of maximal temperature storage tank Resetable to current temperature	yes
25 °C		Indication of universal temperature measuring points (T3)	no
55 °C		Indication of current temperature storage tank thermostat	no
60 °C		Indication of current temperature collector return	no
1234 h		Operating hours for charging storage tank Resetable to 0 h	yes
927 kWh		Energy productivity for storage tank Resetable to 0 kWh	yes

### 7.3 Menu „Programming“

All changable parameters can be checked in this menu and, if necessary, changed. In the factory-set-up usual values, which as a rule guarantee problem-free function of the system, are placed.

The number of indicated values depends on the controller type and the adjusted additional functions. Only the needed values are shown at a time:






Indication e.g.		Meaning	Value range	Typical adjustment
<b>max</b> <b>65 °C</b>		Storage tank: Permissible maximal temperature	15..95°C	65°C
<b>dT max</b> <b>7 K</b>		Storage tank: switch-on difference (dT <sub>on</sub> )	3..40K	7K
<b>dT min</b> <b>3 K</b>		Storage tank: switch-off difference (dT <sub>off</sub> )	2..35K	3K
<b>min</b> <b>100</b>	 	Adjustment of minimal pump power at rotational speed regulation 100% = rotational speed regulation off	30%..100 %	100%
<b>40 °C</b>		Switch-on temperature of thermostat function	20..90°C	40°C
<b>dT</b> <b>10 K</b>		Hysteresis of thermostat function	1..30K	10K

**Grey fields: reading for SOLAREG II ENERGY only**

### 7.4 Menu „Manual operation“

For service and test purposes the solar system can be operated by hand. For this purpose 230V switch outputs may be disconnected or connected. During manual operation there is no automatic regulation of the

system. To avoid inadmissible operating states this mode of operation changes into „Indication“ after ca. 8 hours and the automatic regulation is activated again.

Indication 	Meaning	Value range
  <b>1</b>	Switching on / off switch output A1 (solar circulation pump) by hand	0 = off 1 = on
  <b>2</b>	Switching on / off switch output A2 (Cooling and thermostat function) by hand.	0 = off 1 = on


## 7.5 Menu „Basic adjustment“



Adjustments and changes in this menu must be carried out only by an installator or competent staff. False adjustments may affect the function of controller and solar system.

To avoid accidental changes in menu „Basic adjustment“, it is not editable in normal functioning but has only display function. **To be able to carry out any changes, you must choose this menu within the first minute after switching on the appliance.** Then

the possibility of time-unlimited editing is given. **The basic adjustment menu „is blocked“ automatically within one minute after leaving or one minute after switching on the appliance.**

Indication 	Meaning	Value range	Factory set-up
Line / value			
0 -- 0	Switching on or off function collector protection	0 = off 1 = on	0 = off
1 -- 120 °C	Temperature at which the collector protection function is active	110..150°C	120°C
2 -- 0	Switching on or off function recooling (only when the collector protection is on)	0 = off 1 = on	0 = off
3 -- 40 °C	Temperature to which the storage tank is recooled after active collector protection function	30..90°C	40°C
4 -- 0	Special function for time-controlled circulation in operation with tube collectors	0 = off 1 = on	0 = off
5 -- 0	Switching on or off function energy productivity measurement	0 = off 1 = on	0 = off
6 -- 0	Alternative choice of cooling function or thermostat function	0 = off 1 = cooling function 2 = thermostat function	0 = off

**Grey fields: reading for SOLAREG II ENERGY only**

## 8 CONTROLLER FUNCTIONS

The controllers SOLAREG II contain many functions to regulate and monitor solar system. Basically you can distinguish

- controller functions for charging a storage tank

- functions for system protection and system monitoring
- additional functions.

## 8.1 General controller functions

The controller collects the temperatures of various measuring points and determines the right time to charge the storage tank on


account of programmed (additional) functions and controller parameters.

### 8.1.1 Storage tank charge

Controller	Corresponding values in menu	
	„Basic adjustment“:	„Programming“:
BASIC / ENERGY	---	Maximal temperature
BASIC / ENERGY	---	dT max (dTon) Switch-on temperature difference
BASIC / ENERGY	---	dT min (dTOff) Switch-off temperature difference

The storage tank is being charged through the pump on output A1 up to adjusted maximal temperature so long as the collector temperature becomes higher by a cer-

tain amount than the storage tank temperature. Switching action can be adjusted through dTmax (dTon) and dTmin (dTOff), but dTon cannot get lower than dTOff + 1K

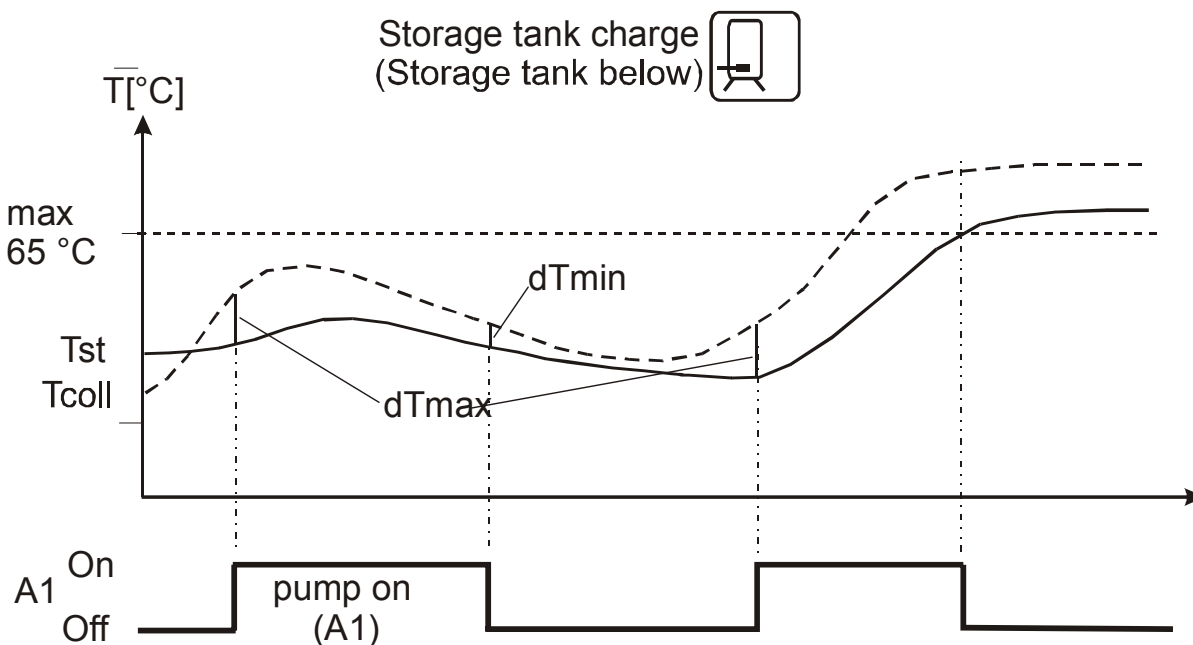

### 8.1.2 Rotational speed regulation

Controller	Corresponding values in menu	
	„Basic adjustment“:	„Programming“:
BASIC / ENERGY	---	Rotational speed min <100%

The solar circulation pump on 230V-outputs A1 can be operated either in switch-mode (two-point controller) or in a rotational speed regulated way.

If the rotational speed regulation is activated the pump power is adjusted by a controller so that switch-on temperature difference

„Storage tank  $dT_{max}$ “ is kept constant as much as possible. At lower deviation of „Storage tank  $dT_{max}$ “ the pump is operated with the lowest power till the switch-off wave is reached.


### 8.1.3 Thermostat function (reheating)

Controller	Corresponding values in menu	
	„Basic adjustment“:	„Programming“:
ENERGY	6-- 2	Thermostat Ton (Tth)
		Thermostat dT

The thermostat function is a control circuit dependant of storage charge. In this way e.g. the reheating of the upper stand-by part of the storage tank independent of solar circulation function is enabled.

Switch output A2 is

- switched on when the adjusted temperature „Thermostat Ton“ (Tth) remains under
- switched off when the adjusted temperature „Tth + dT“ remains over.

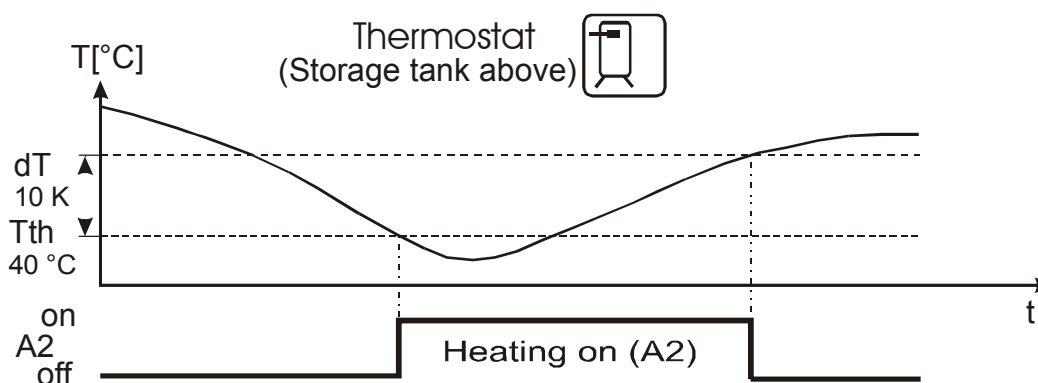

### 8.1.4 Cooling function

Controller	Corresponding values in menu	
	„Basic adjustment“:	„Programming“:
ENERGY	6 -- 1	---

To increase the energy productivity of solar system it may be useful to „by-pass“ the solar energy at reaching a certain storage tank temperature or to take it from the storage tank. If the temperature of the storage tank

(Tst) goes over the temperature barrier Tstmax – 5K (adjusted maximal storage tank temperature – 5K), the switch output A2 is switched on. Switching off takes place at lower deviation of this temperature.


### 8.1.5 Tube collector function

Controller	Corresponding values in menu	
	„Basic adjustment“:	„Programming“:
ENERGY	4 -- 1	---

The function „Tube collector“ is switched on or off in menu Basic adjustments. If the function is activated a circulation of heat carrying medium through the collector takes place for 30 seconds every 30 minutes. It is


necessary to be able to measure a temperature change in the collector when no regulation-conditioned circulation has taken place for a longer time.

## 8.2 System monitoring

In the case of an error the flashing symbol  is shown as a rule.

### 8.2.1 Sensor monitoring


The sensors necessary for control functions and their connecting cables are monitored regarding break and short circuit. If a faulty sensor is recognised by Software, the sym-

bol  is shown. By scrolling up and down you can find an error source.

Indication	Meaning
— — <u>X</u> — —	Short circuit on temperature sensor of the current measuring point
— — <u>l</u> — —	Break on temperature sensor of the current measuring point, Circulation error at activated energy productivity measurement



### 8.2.2 Flow monitoring

Indication	Meaning
	Missing circulation in solar circuit

The controller SOLAREG II –BASIC checks the temperature difference between collector and storage tank.

If it exceeds the amount of  $(60K + dT_{max})$ , it is then interpreted as an error because in the case of normal system dimensioning and a pump switched on such big differences cannot take place.

The controller SOLAREG II –ENERGY checks the flow amount at the pump switched on. If for 15 minutes no flow is recognised it is evaluated as an error.

Error message is automatically reseted after eliminating the failure.

### 8.2.3 Collector protection function / recooling

Controller	Corresponding values in menu		
	„Basic adjustment“:	„Programming“:	„Info“:
BASIC / ENERGY	0 -- 1 1 -- 120 °C 2 -- 1 3 -- 40 °C (siehe 7.5)	---	---

The function is in menu basic adjustments switched on or off.

Glycol mixtures can decompose in certain conditions at high temperatures. Therefore the maximal temperature should be limited if possible in the collector circuit.

If all storage tanks are charged up to  $T_{max}$ , the solar circulation pump is cut off. If the collector temperature exceeds the adjusted value „T Kollektor max.“, the solar circulation pump is being switched on until the collector temperature is reduced by 10K. A part of energy is given away through pipelines as a waste, the rest is charged in the storage tank which leads to the increase of the stor-

age tank temperature over the adjusted maximal temperature. For safety reasons the function is finished when the storage tank has achieved 95°C.

If the collector temperature falls by 2K under  $T_{st}$ , the recooling function becomes active. The excess storage tank energy is given away again through the collector so that at the next charging cycle new reserves are available again. The recooling is finished when  $T_{st}$  falls under the adjusted value  $T_{st max}$ .

The recooling function can be switched on only when the collector protection function is on.

### 8.2.4 System protection function

The system protection function switches off the system at the temperature exceed „T collector max.“ (see 8.2.3) + 10 K. This function comes into effect no matter if the

collector protection is activated or not. As soon as the temperature falls below this value the system is started again.

## 8.3 Additional functions

### 8.3.1 Energy productivity measurement

Corresponding values in menu			
Controller	„Basic adjustment“:	„Programming“:	„Info“:
ENERGY	5 -- 1	---	xxxx kWh

For energy productivity measurement you need additionally a flowmeter and a PT1000-sensor to measure the collector return temperature Tret.

Energy productivity of the solar system is calculated on the basis of the temperature

difference between collector and collector return temperature and the measured flow quantity.





The function is switched on or off in menu „Basic adjustments“.

## 9 FAILURE REPAIR

In the case of system failures you must basically distinguish two categories:

- failures which can be recognised by the controller itself and therefore can be indicated
- failures which cannot be indicated by the controller

### 9.1 Failures with error message

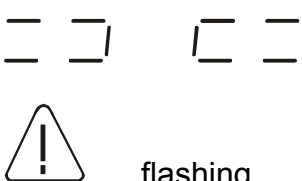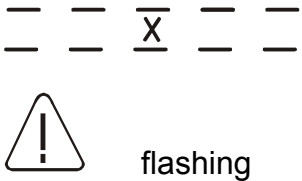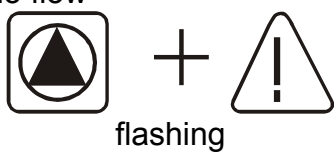Error representation on display	possible reasons	Measures
 flashing	<ul style="list-style-type: none"> <li>• sensor wire broken</li> <li>• sensor defect</li> </ul>	<ul style="list-style-type: none"> <li>➞ check wire</li> <li>➞ check sensor resistance, if necessary exchange sensor</li> </ul>
 flashing	<ul style="list-style-type: none"> <li>• short circuit in sensor wire</li> <li>• sensor defect</li> </ul>	<ul style="list-style-type: none"> <li>➞ check wire</li> <li>➞ check sensor resistance, if necessary exchange sensor</li> </ul>
Circulation error: no flow  flashing  Additionally at energy productivity measurement: 	<ul style="list-style-type: none"> <li>• error in pump connection</li> <li>• pump defect</li> <li>• air in the system</li> <li>• flow meter defect</li> <li>• connection with flow meter defect</li> <li>• sensor wire broken</li> <li>• sensor defect</li> </ul>	<ul style="list-style-type: none"> <li>➞ check cabling</li> <li>➞ exchange pump</li> <li>➞ deaerate the system</li> <li>➞ check if an impeller of the meter moves when the system runs (if visible)</li> <li>➞ check wire</li> <li>➞ check wire</li> <li>➞ check sensor resistance, if necessary exchange sensor</li> </ul>

## 9.2 Failures without error message

You can check failures and malfunctioning, which are not indicated, and find their error sources according to the following table.

If failure repair is not possible on the basis of the description you must ask the deliverers or installer.

Error presentation	Possible reasons	Measures
No display function	<ul style="list-style-type: none"> <li>• 230V-mains voltage not existing</li> </ul>	<ul style="list-style-type: none"> <li>➡ switch on or connect the collector</li> <li>➡ check house safety fuse for the connection</li> </ul>
	<ul style="list-style-type: none"> <li>• appliance-internal safety fuse defect</li> </ul>	<ul style="list-style-type: none"> <li>➡ check safety fuse, replace it by a new one, type 2A/T, if necessary.</li> <li>➡ check 230V components on short circuit</li> </ul>
	<ul style="list-style-type: none"> <li>• appliance defect</li> </ul>	<ul style="list-style-type: none"> <li>➡ consult with the deliverers</li> </ul>
Controller does not work	<ul style="list-style-type: none"> <li>• controller is in manual operation</li> <li>• switch-on condition not fulfilled.</li> </ul>	<ul style="list-style-type: none"> <li>➡ exit menu „Hand“.</li> <li>➡ wait until the switch-on condition is fulfilled</li> </ul>
Symbol „Pump“ rotates, but pump does not work	<ul style="list-style-type: none"> <li>• pump connection broken.</li> <li>• pump is fixed.</li> <li>• no voltage on switch output.</li> </ul>	<ul style="list-style-type: none"> <li>➡ check cable to pump</li> <li>➡ make the pump run well</li> <li>➡ consult with the deliverers.</li> </ul>
Temperature display varies strong in short time intervals	<ul style="list-style-type: none"> <li>• sensor wires laid near 230V-wires</li> <li>• long sensor wires lengthened without shielding</li> <li>• appliance defect</li> </ul>	<ul style="list-style-type: none"> <li>➡ lay sensor wires differently shield sensor wires</li> <li>➡ shield sensor wires</li> <li>➡ consult with the deliverers</li> </ul>

## 10 TECHNICAL DATA SOLAREG II

Housing	
Material	100% recyclable ABS-housing for wall installation
Measures L x W x D in mm, weight	175 x 134 x 56; ca. 360 g
System of protection	IP40 according to VDE 0470
Electrical values	
Operating voltage	AC 230 Volt, 50 Hz, -10...+15%
Interference grade	N according to VDE 0875
Max. conductor cross-section 230V-connections	2,5 mm <sup>2</sup> fine-strand/single-wire
Temperature sensor / temperature range	PTF6 - 25°C - 200°C PT1000, 1,000 kΩ at 0°C
Testing voltage	4 kV 1 min according to VDE 0631
Switching voltage Capability per one switch output Total capability of all outputs	230V~ / 1A / ca. 230VA for cos φ = 0,7-1,0 2A / ca. 460VA maximal
Fuse protection	fine-wire fuse 5 x 20mm, 2A/T (2 amperes, slow)
Others	
Recommended flow transmitter	PVM 1,5/90 1500l/h, T <sub>max</sub> ≥ 90°C, 10l/impuls
Operating temperature	0 ... + 50°C
Storing temperature	-10 ... + 65°C

Changes for technical purposes reserved!

## 11 RESISTANCE TABLE PT1000

The correct function of temperature sensors can be checked on the basis of the following temperature resistance table with a resistance measuring instrument:

Temperature in °C	Resistance in Ohm	Temperature in °C	Resistance in Ohm
-30	882	60	1232
-20	921	70	1271
-10	960	80	1309
0	1000	90	1347
10	1039	100	1385
20	1077	120	1461
30	1116	140	1535
40	1155	200	1758
50	1194		

## 12 TABLE TYPICAL - CURRENT ADJUSTMENTS

Adjustments in menu „Programming“	Typical adjustment	Current adjustment
Storage tank: permissible maximal temperature	65 °C	
Storage tank: switch-on difference (dT <sub>on</sub> )	7 K	
Storage tank: switch-off difference (dT <sub>off</sub> )	3 K	
Minimal pump power at rotational speed regulation	100 %	
Switch-on temperature of thermostat function	40 °C	
Hysteresis of thermostat function	10 K	

Adjustments in menu „Basic adjustment“	Typical adjustment	Current adjustment
Switching on or off the function collector protection	0 = off	
Temperature at which the collector protection function is active	120 °C	
Switching on or off the function recooling (only when the collector protection is on)	0 = off	
Temperature to which the storage tank is recooled after the active collector protection function	40 °C	
Special function for time-controlled circulation in operation with tube collectors	0 = off	
Switching on or off the function energy productivity measurement	0 = off	
Alternative choice of the cooling function or the thermostat function	0 = off	

## 13 TERMS OF GUARANTEE

The controlling appliances SOLAREG II are carefully produced and checked at an automatic test place. Should any failures occur, check first if there are any operation / adjustment or system error. Furthermore the pump and temperature sensor connections are to be checked.

PROZEDA GmbH provides a guarantee according to the following terms for 24 months beginning from the purchase date.

- a) The guarantee takes place in the case of existing material defect of the purchased good. If this defect is due to an operating error, exceeding the permissible technical data, false wiring, not permissible technical changes in the appliance made by the customer or other company than ROZEDA GmbH, no guarantee is provided.

- b) The **guarantee** requires a **notification in writing** which **describes the defect in detail** and a copy of a customer's invoice.

The guarantee takes place according to the free choice of PROZEDA GmbH through

- repair (improvement) or

- delivery of functioning spare part

The maximum repair period is 1 month with effect from receipt of the appliance by PROZEDA GmbH.

If two repair attempts go wrong, the customer has the right to the claim to the delivery of functioning spare part.

In the case of delivery of a spare part a new guarantee meeting these terms comes into effect.

- c) Any further warranty (exchange, price reduction) is excluded.

Guarantee claims are entitled only to the customer and are not transferable.

In the case of defects within the guarantee time communicate first with the deliverers / installers. In the case of returns you always have to enclose error description, if possible the appliance plan and wiring plan.

## 14 DECLARATION OF CONFORMITY

The described appliance has been

made and tested in compliance with CE-guidelines.